


Product Information Sheet

Latch Assembly

AT LATCH

- Using the template provided mark out the hole positions and drill holes.
- Remove M4x16 screws and take apart.
- Ensure signal and knob are in closed position.
- Position AT Face Plate upto Door/Fascia.
- Align the AT Knob Assembly to the Face Plate.
- Secure together with the M4x16 screws.
- Ensure the Face Plate is positively and securely located.
- Check for free movement of latch.
- Ensure the Signal indicates correctly – **GREEN 'OPEN' / RED 'CLOSED'**
- Fit Screw Covers.
- Fit Buffers to top and bottom of the door.

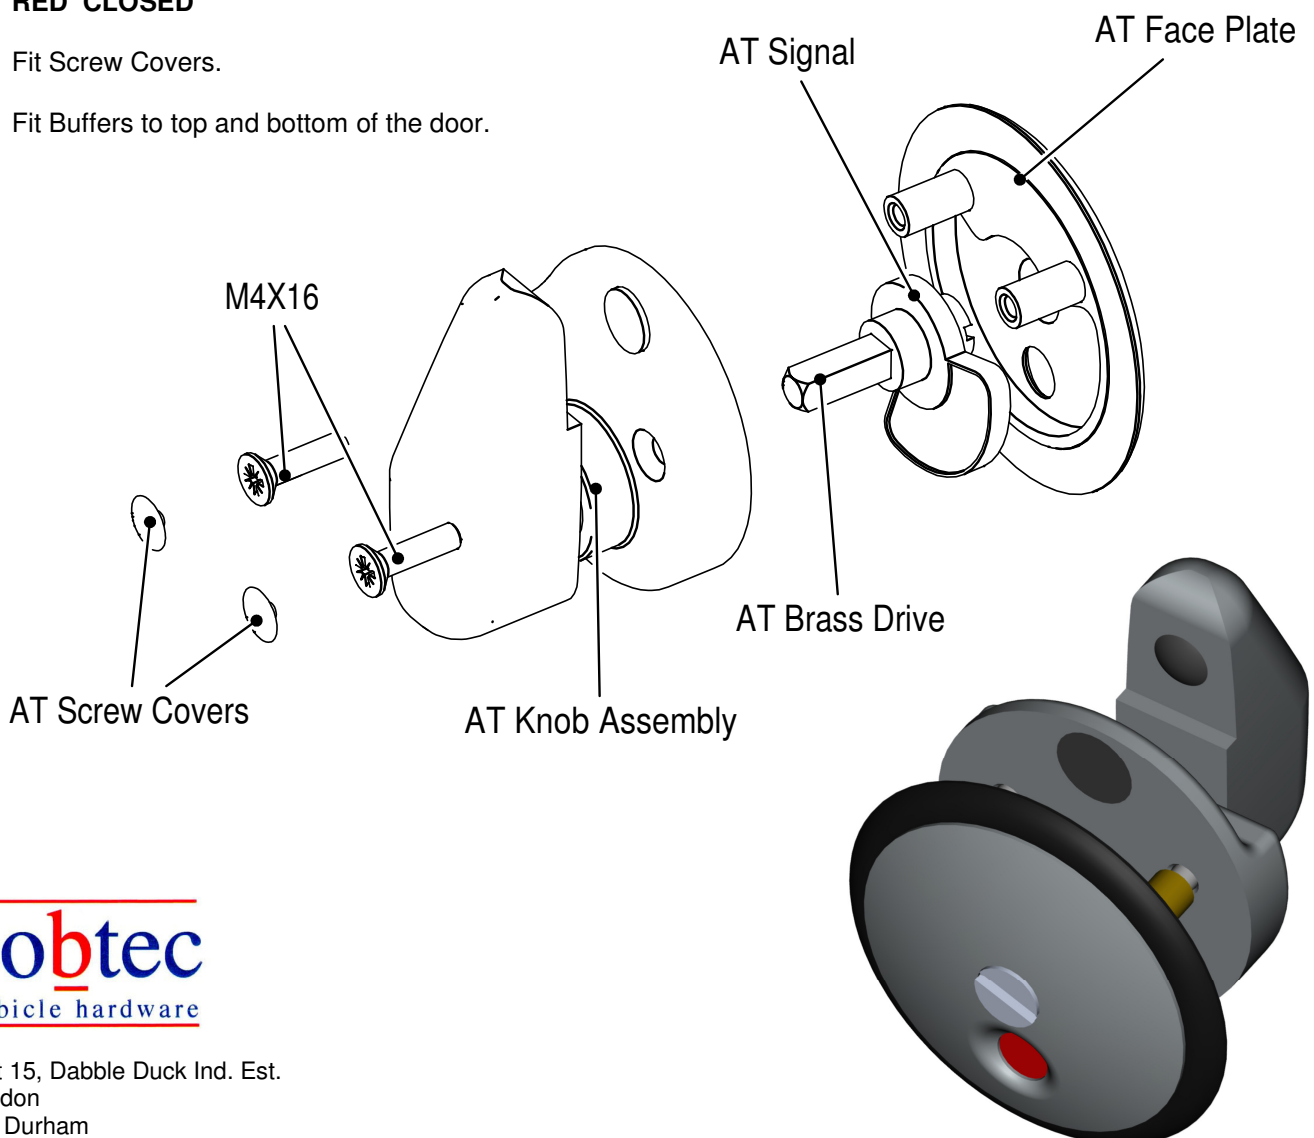

cobtec
cubicle hardware

Unit 15, Dabble Duck Ind. Est.
Shildon
Co. Durham
UK
DL4 2QN

Phone: +44 (0)1388 770580 Fax: +44 (0)1388 778491

E-mail: cobtec@bignall.co.uk

REF: ATLATCH Iss. 1