
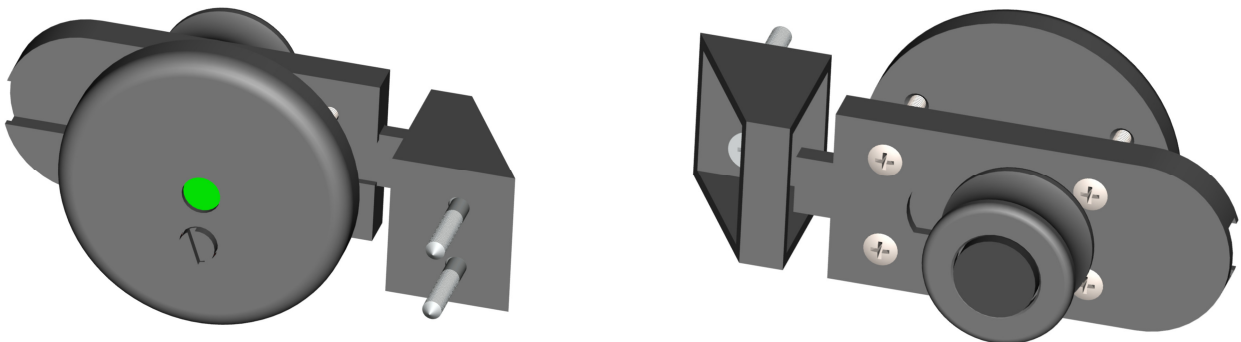


Product Information Sheet

Latch Assembly

FPR 1/3 COMPLETE

- Mark out hole centres as shown and machine slot.
- Once holes have been drilled, position up the Bolt Housing and Face Plate.
- Secure together with the M4 Bolts supplied, ensure the Bolt mechanism operates signal correctly. ('Green' - Open / 'Red' - Closed)
- Check for free movement of Bolt and Signal.
- Once satisfied, position the keep to the correct position on the fascia and fix in place with the two No.8 x 5/8" Woodscrews supplied.
- Fit buffers to top and bottom of the door.

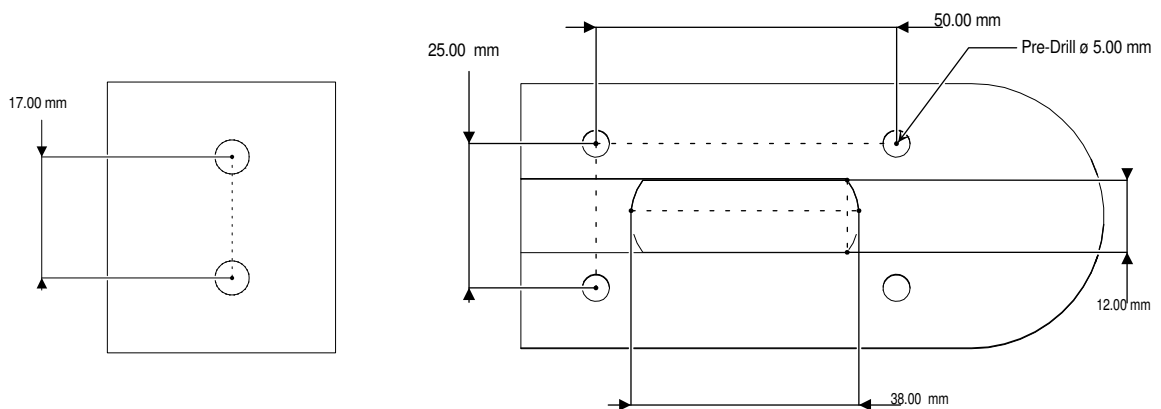

cobtec
cubicle hardware

Unit 15, Dabble Duck Ind. Est.
Shildon
Co. Durham
UK
DL4 2QN

REF: FPR 1/3 COMP Iss. 3

Phone: +44 (0)1388 770580 Fax: +44 (0)1388 778491 E-mail: cobtec@bignall.co.uk