


Product Information Sheet

Guide To Fitting Brackets To Wall

- Fit brackets to wall first
- Ensure all brackets are plumb

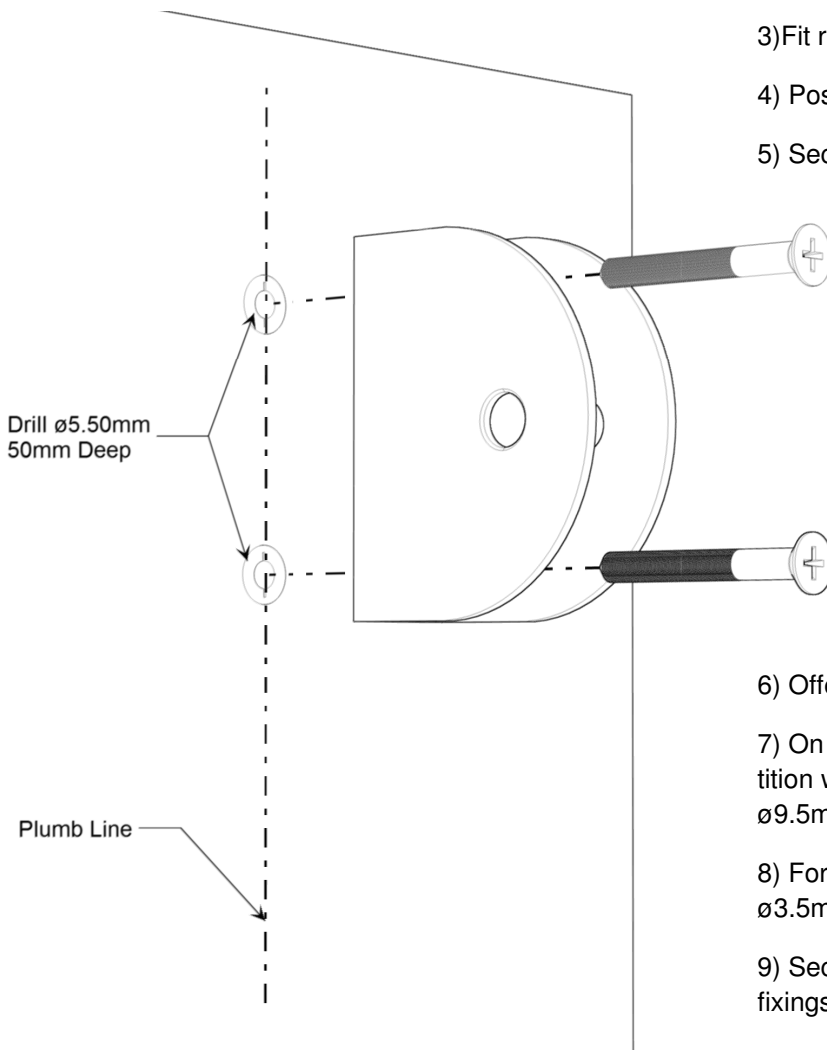

- 1) Mark hole positions.
- 2) Drill wall with $\text{ø}5.5\text{mm}$ Drill to a depth of 50mm.
- 3) Fit red wall plugs into wall.
- 4) Position bracket on wall.
- 5) Secure with 2 x No.8 x 2" Woodscrews.

- 6) Offer up partition to brackets.
- 7) On Bolt through applications drill through partition with $\text{ø}6.5\text{mm}$ for Anti Vandal fixings, $\text{ø}9.5\text{mm}$ for T Nut fixings
- 8) For woodscrew applications pilot drill $\text{ø}3.5\text{mm}$, do not drill through partition.
- 9) Secure partition to bracket using supplied fixings.
- 10) Support other end of partition until ready to fit Centre Pilaster.

cobtec
cubicle hardware

Unit 15, Dabble Duck Ind. Est.
Shildon
Co. Durham
UK
DL4 2QN